

CLEANING INSTRUCTIONS / RECOMMENDATIONS FOR USE OF MAHLER FABRIC

- 1. No solvents or strong alkaline cleaners shall be used. Use of these products may cause damage. Due to previous experiences and extensive testing results by Hoechst we recommend for PVC.
- 2. Rinse off the soil on the surface with cold or warm water.
- 3. Apply the amount of detergent cleaner required for the type of soiling (cheap dishwashing liquid and warm water will suffice), Use a soft brush or boom to apply to the material.
- 4. Rinse off the dirt with pure cold or warm water. Then dry off thoroughly with a dry cloth or by air. Do not overheat the surface.
- 5. The material must be stocked clean and under absolute dry conditions.
- 6. Always ensure fabric is folded on outside of arms when retracting umbrellas

7. Recommended suppliers of detergent:

* Woellner Werke Woellner Strasse 26 D-67065 Ludwigshafen Tel. + 49 (0) 621-54020 Fax + 49 (0) 621-5402300 * Kärcher GmbH Postfach 160 D-71349 Winnenden Tel. +49 (0) 7195-9030 www.karcher.com

If in doubt about a particular cleaning solution, please do not hesitate to contact us for our recommendation.

When using manufacturers recommended detergent always follow the recommended concentration laid down by the manufacturer of the cleaner.

This information is according to actual knowledge as per June 2001 and is without legal commitment.

Under no circumstances use a pressure washer to clean the umbrella canopy.